CITIZEN


CL-E700 SERIES PEELER INSTALLATION GUIDE FOR SERVICE REPRESENTATIVES

⚠ Caution

This document is intended for use by service representatives. Installation of the peeler will be performed by a service representative, so please contact your supplier for assistance.


1 Check to make sure that the printer's power switch is turned off, then disconnect the power cord.

2 Open the top cover.

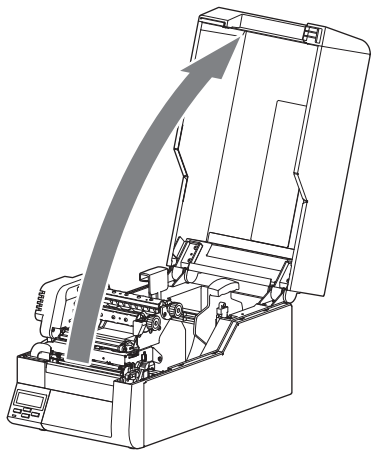


3 Lift and remove the front cover from the printer.

Note **Keep the removed cover in a safe place, because it is used when the peeler has been removed.**

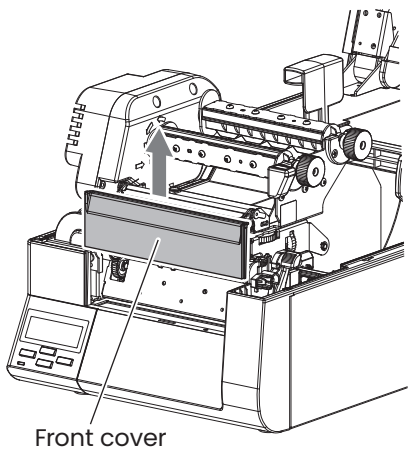


4 Remove the screw (1 screw) fastening the cable cover, and then lift and remove the cable cover. Take care that the screw does not fall inside the printer chassis.


↓Continued below

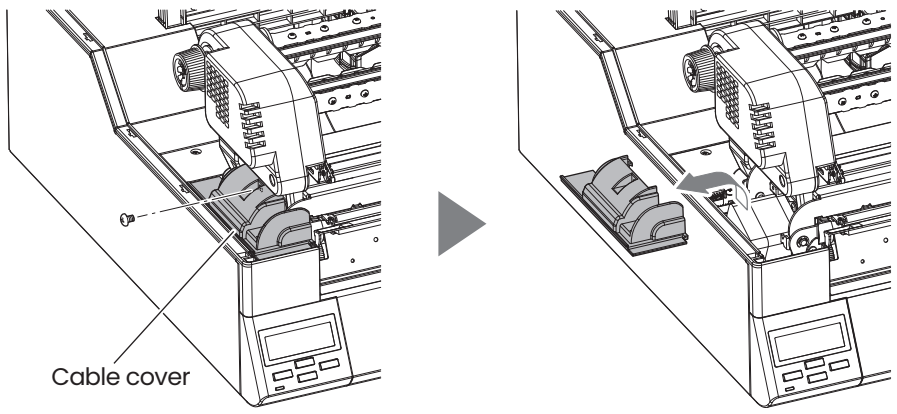


5 Push the large blue-head open lever to release the head unit.

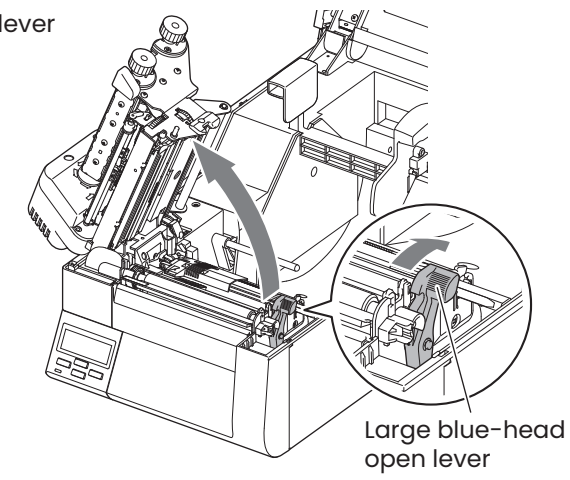

6 Remove the screw (1 screw) fastening the optional unit connector cover, and then remove the optional unit connector cover.

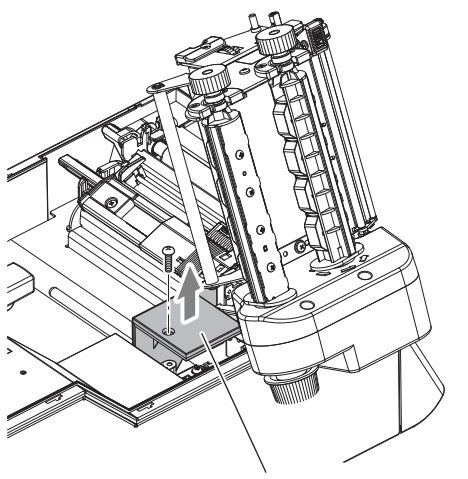

7 Push the head close knob to lower and lock the head unit.

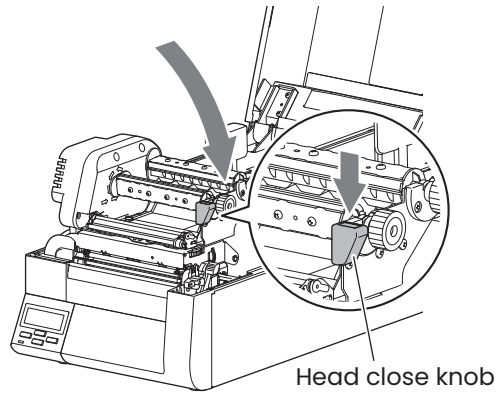


8 Attach the peeler unit to the printer.


❶ Install the peeler unit by aligning the pins (2 locations) on the back of the peeler unit with the alignment holes on the printer.

❷ Slide the release knob of the peeler unit to the left and open the peeler unit.

❸ Secure the peeler unit by using the attached screws (2 screws). When the peeler unit is secure, close the peeler unit.

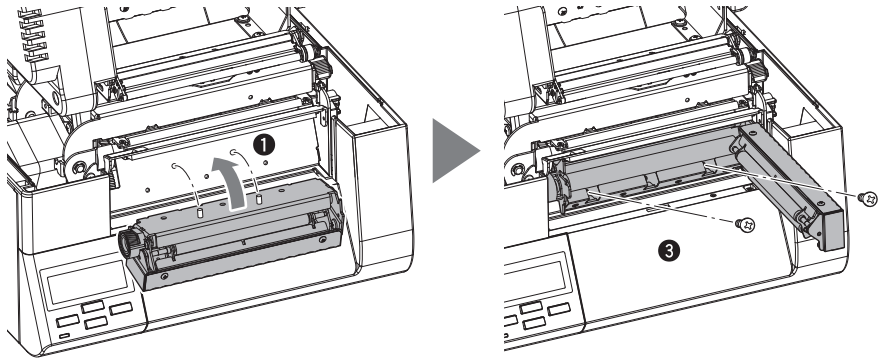


9 Plug the connector of the peeler unit cable into the optional connector on the printer.

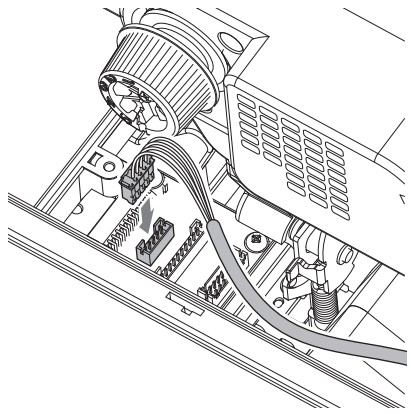

↓Continued below

10 Feed the cable, in ***9***, so that it lies along the printer's case. When replacing the optional unit connector cover and the cable cover, take care that the covers do not pinch the cable.

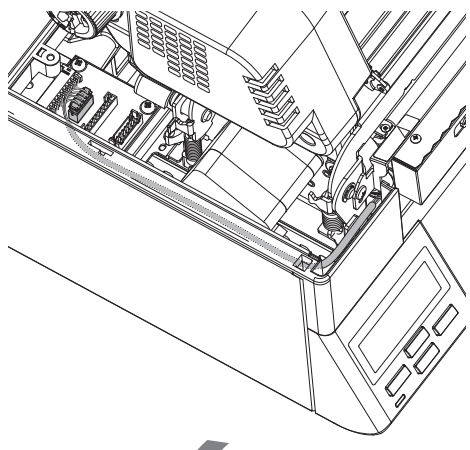

11 After the peeler unit is installed, reinstall the cable cover and the optional unit connector cover on the printer.
To reinstall the cable cover and optional unit connector cover, follow the removal steps in reverse order.

Note **Be very careful as the motor may be hot.**



12 Close the top cover.

13 Connect the power cord and turn on the power switch of the printer.

Note **Removing the peeler unit**

To remove the peeler unit from the printer, follow the installation steps in reverse order. If the screws that fasten the peeler unit are removed, the unit may fall from the printer, so hold the peeler unit with your hand while loosening the fastening screws.

CITIZEN is a registered trademark of CITIZEN WATCH CO., Japan.
CITIZEN es una marca registrada de CITIZEN WATCH CO., Japón.
Copyright © 2016 by CITIZEN SYSTEMS JAPAN CO., LTD.

出版日期 : 2025年8月25日 Printed in China PXZ00123-20
PMC-1609